

MR-8515

User Manual

I Remove the ribbon cable from the CPU board and restart the board.

www.microrobot.com